


CARBON FIBER AIR INTAKE SYSTEM

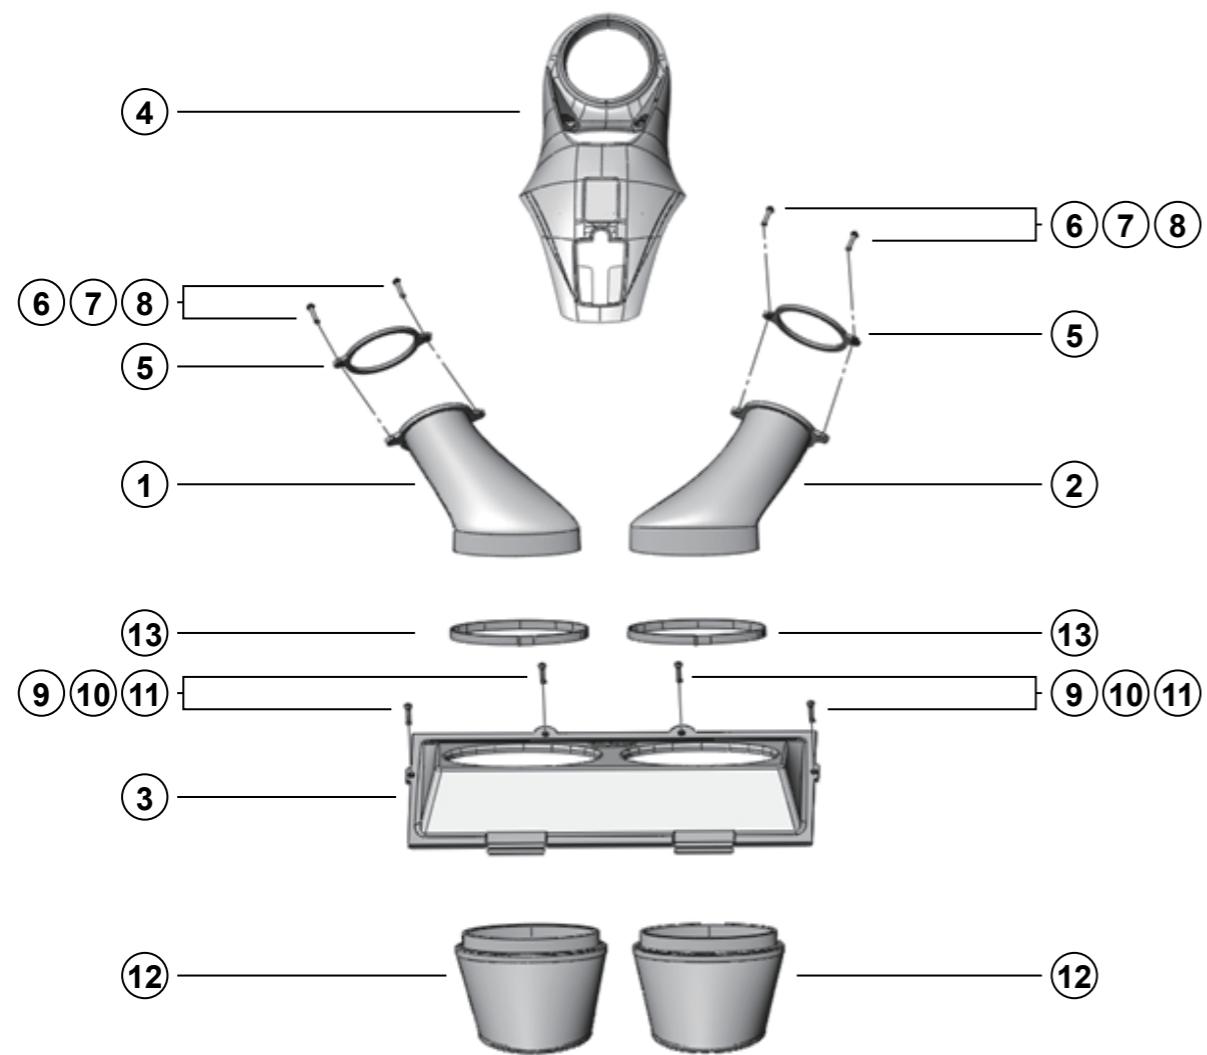

FERRARI 488

USER MANUAL

ARMASPEED Warranty Terms & Conditions

»»» Warranty Period

The warranty covers the product mechanically within 6 months or 10,000 km, whichever comes first, from the purchase date. Non-transferable.

»»» Disclaimer of Warranty

1. To accommodate the regional climate, most of car manufacturing companies would slightly adjust ECU. Changing intake or exhaust system might cause engine lights on. Under the premise that it wouldn't cause engine lights on, the purpose of the product is to bring out the best in energy efficiency. ARMASPEED will not guarantee or offer a warranty for the road feel or product impressions due to gears change, torque limit, engine light on, etc. Please kindly understand any modification may cause risk.
2. The product is designed to improve car performance for daily driving. The warranty would be void if the product is used in a race or competition.
3. The warranty does not cover any damage caused in whole or in part by force majeure or harsh driving.
4. ARMASPEED shall NOT be liable for incidental or consequential damages whatsoever and in no case shall the ARMASPEED be responsible for any damages exceeding the original purchase price of the product.
5. The warranty would be void if the user drills, trims, paints, modifies, etc., the product or change the function and appearance.
6. All performance parts or systems should be installed by mechanics who are experienced in installation and proper operation. The warranty would be void if the product is misused, the user alters the design and disassembles without authorization of ARMASPEED, or the user fails to follow the ARMASPEED's instructions to install and maintain.

»»» Limited Warranty

ARMASPEED warrants to the original purchaser that the product is free of manufacturing defects in materials and workmanship in the limited duration. If the product is found to be defective, in the ARMASPEED's sole judgment, it would be either repaired or replaced with a new product, and the original purchaser shall be liable for return shipping/handling fees. If the product is out of production, ARMASPEED would only repair, but not replace it with other new product.

Purchaser understands and agrees only ARMASPEED has the right to amend the terms of use, and any performance car shops and authorized dealers cannot void the statement.

If you have any questions about our warranty terms, please send an email at service@armaspeed.com.


Tel: +886-6-5930028 Web: www.armaspeed.com

DIY parts			
Drawing No.	Part	No.	Quantity
1	FERRARI 488-tube-L	ARMAFER488-1	1
2	FERRARI 488-tube-R	ARMAFER488-2	1
3	FERRARI 488-Carbon lid	ARMAFER488-3	1
4	FERRARI 488-engine cover	ARMAFER488-4	1
5	FERRARI 488-accessory-1	CG83-01-0526	2
6	M4*25mm screw	CG46-90-0005	4
7	M4mm washer	CG48-10-0023	4
8	M4 Spring Washer	G55-01-0042	4
9	M5*30mm screw	CG46-10-0344	4
10	M5mm washer	CG48-10-0018	4
11	M5 spring washer	CG48-10-0024	4
12	ARMASPEED air filter	CS56-AR60066	2
13	110-130 steel hose-12w	CG45-30-0130	2




All performance parts or systems should be installed by mechanics who are experienced in installation and proper operation. The warranty would be void if the product is misused, the user alters the design and disassembles without authorization of ARMASPEED, or the user fails to follow the ARMASPEED's instructions to install and maintain.


1 Remove the engine cover, stock lid, maf sensor, rubber hose and air filter.

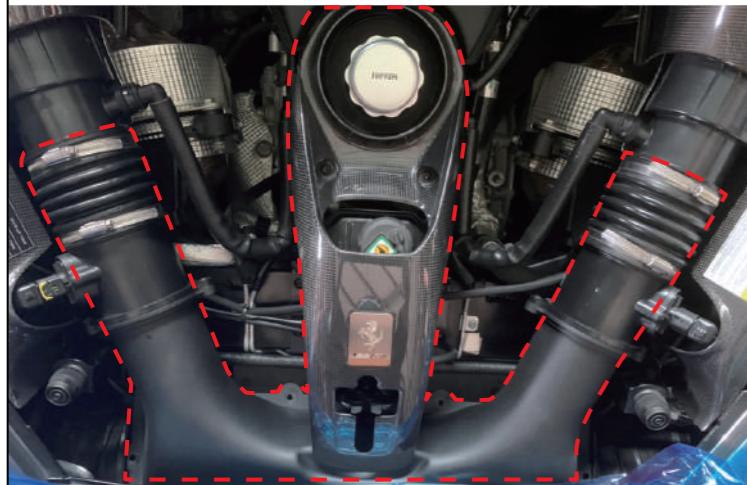


2 Remove the rubber stopper and install to engine cover.

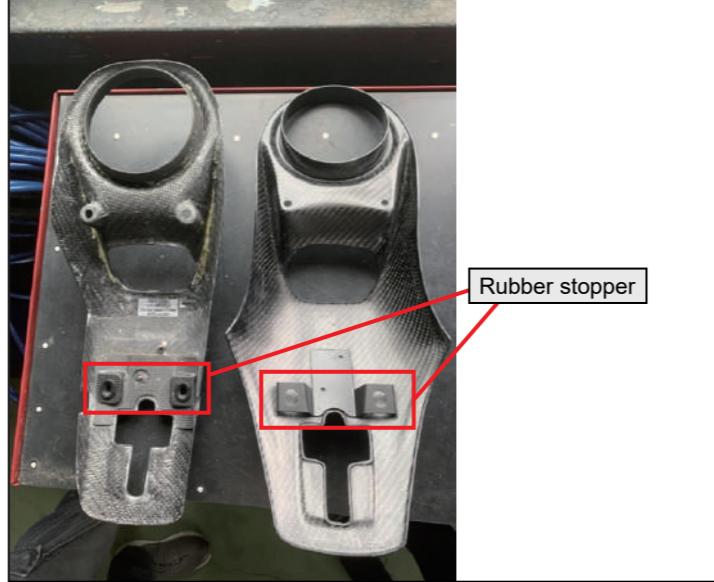


* If you want to mount the stock plate on the new cover, the aluminum strip has preserve the hole for customer who wants to install.

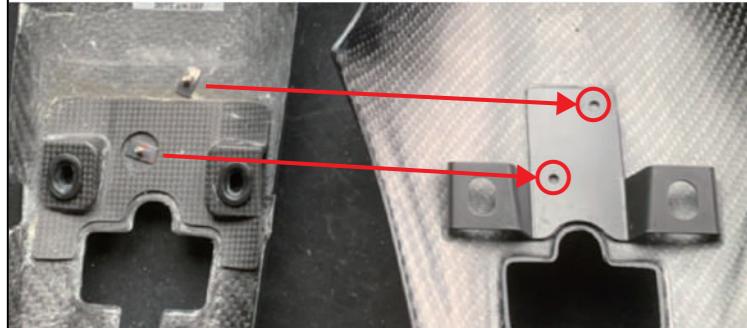

3 Remove the aluminum bracket as instructed.

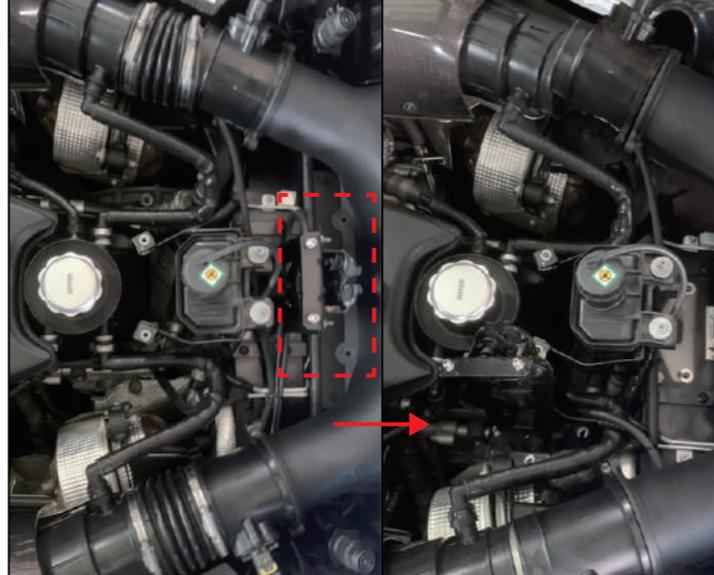


4 Put the air filter in the stock airbox and place the carbon lid (do not lock up yet).

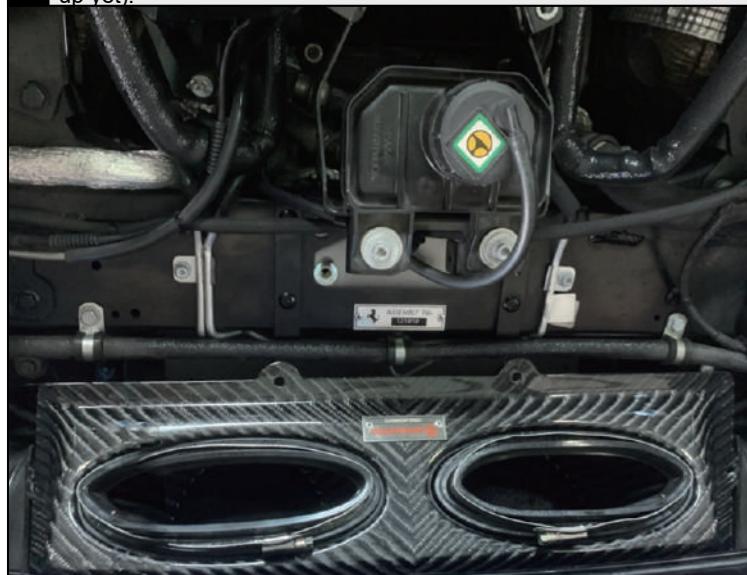


5 Install the stock maf sensor to the carbon fiber tube.

6 Attached accessory – no. 5, 6, 7, 8.

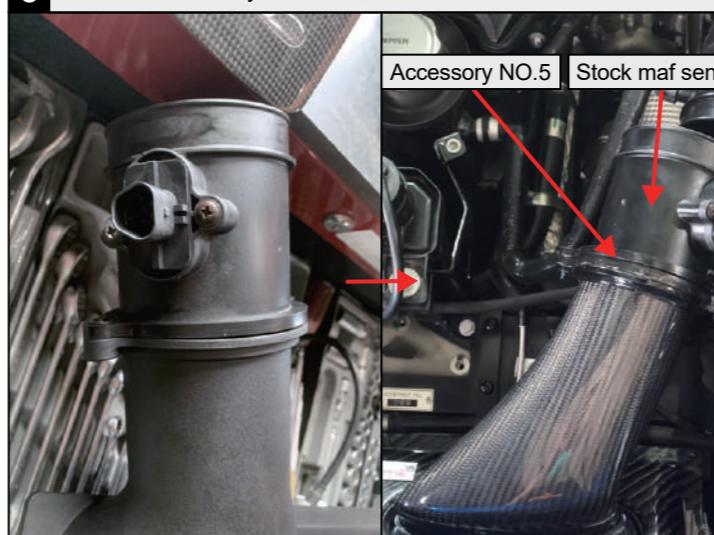

7 Place the carbon fiber tube to carbon fiber inbox and tight up with steel hose –no.13.

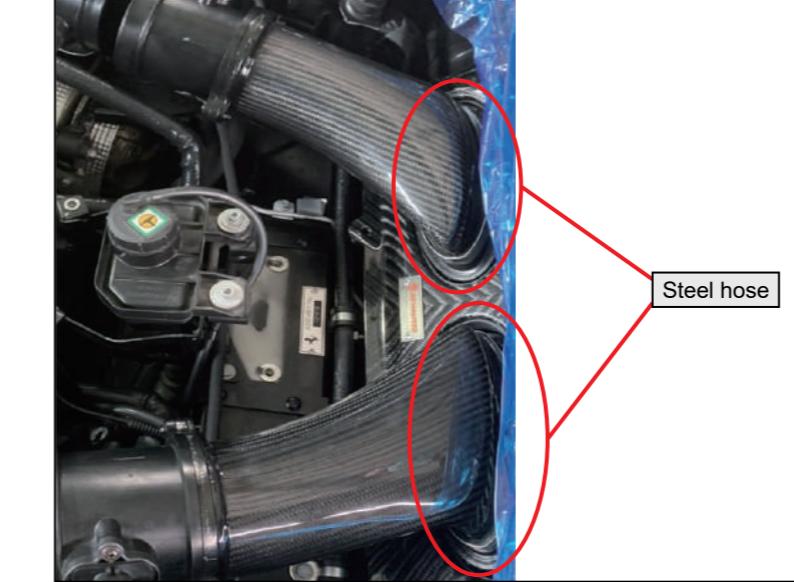


8 Install maf sensor and tight up with rubber hose then lock up with screw no. 9, 10, 11 to airbox lid.



9 Lock up with stock screw.



When fastening the metal hose clamp, recommend set tightening torque at 1.5Nm. Otherwise, it might result in deformation or crack if overtightening.

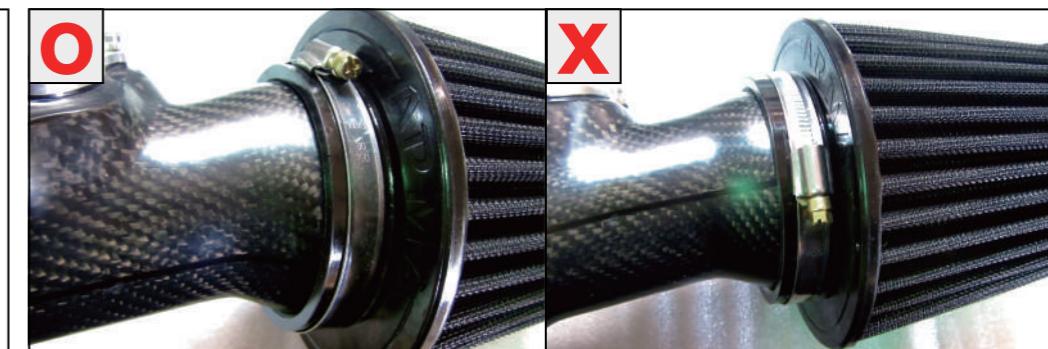

Please avoid fastening the head of the clamp at the line shown on the intake.