

# **Plasma Direct Installation Instructions for BMW**

Thank you for your purchase. Please read this instruction carefully for a proper and safe installation.

# **Safety Instructions**




- 1. Installation shoud be made only on designated vehicles and models.
- 2. Never modify or dismantle this product.
- 3. The vehicle should be on a flat surface, with tires blocked to prevent the vehicle from rolling.
- 4. The engine should be off and completely cooled. Be sure the ignition key is not inserted.
- The negative terminal from the battery should be disconnected. Note that this may cause the security alarm to activate. Consult the vehicle owner's manual to prevent this from occurring.
   The engine should be in good operating condition. Any sign of defects should be corrected
- before installation.
- 7. Make sure you have adequate ventilation before running the engine.
- Installation should be performed by a professional mechanic.
  If the engine performance was previously boosted through modification of the ignition timing or
- air/fuel ratio, it may require readjustment following installation of the product.10. If any defects are found in the product, discontinue using it immediately and contact the dealer
- If any detects are found in the product, discontinue using it immediately and contact the dealer where you purchased the product or us.

## **Parts Included**


4 Place the engine cover back onto the engine.

Plasma Direct coils 3, 4 or 6P

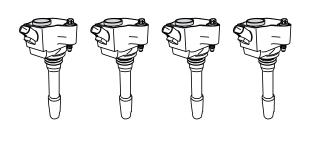


### **Installation Procedure**

- 1 Remove the engine cover to expose the ignition coils, so that you can start the installation of the Plasma Direct coils.
- 2 Disconnect the coil connectors, and remove the ignition coils from the engine.

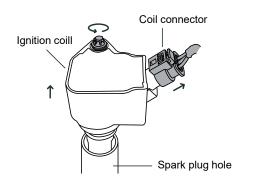

3 Install the Plasma Directs to the engine, and connect the coil connectors.

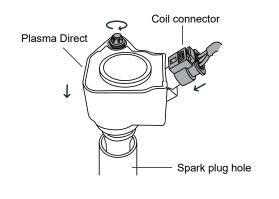





### OKADA PROJECTS Inc.

2-3-5 Kitamikata, Takatsu-ku, Kawasaki-shi Kanagawa 213-0005 Japan www.okadaprojects.com info@okadaprojects.com

All rights reserved. Reproduction in any from without written permission from Okada Projects is prohibited.